


# ESP 7 - Option 2



Desoutter Limited Eaton Road Hemel Hempstead Hertfordshire HP2 7DR England

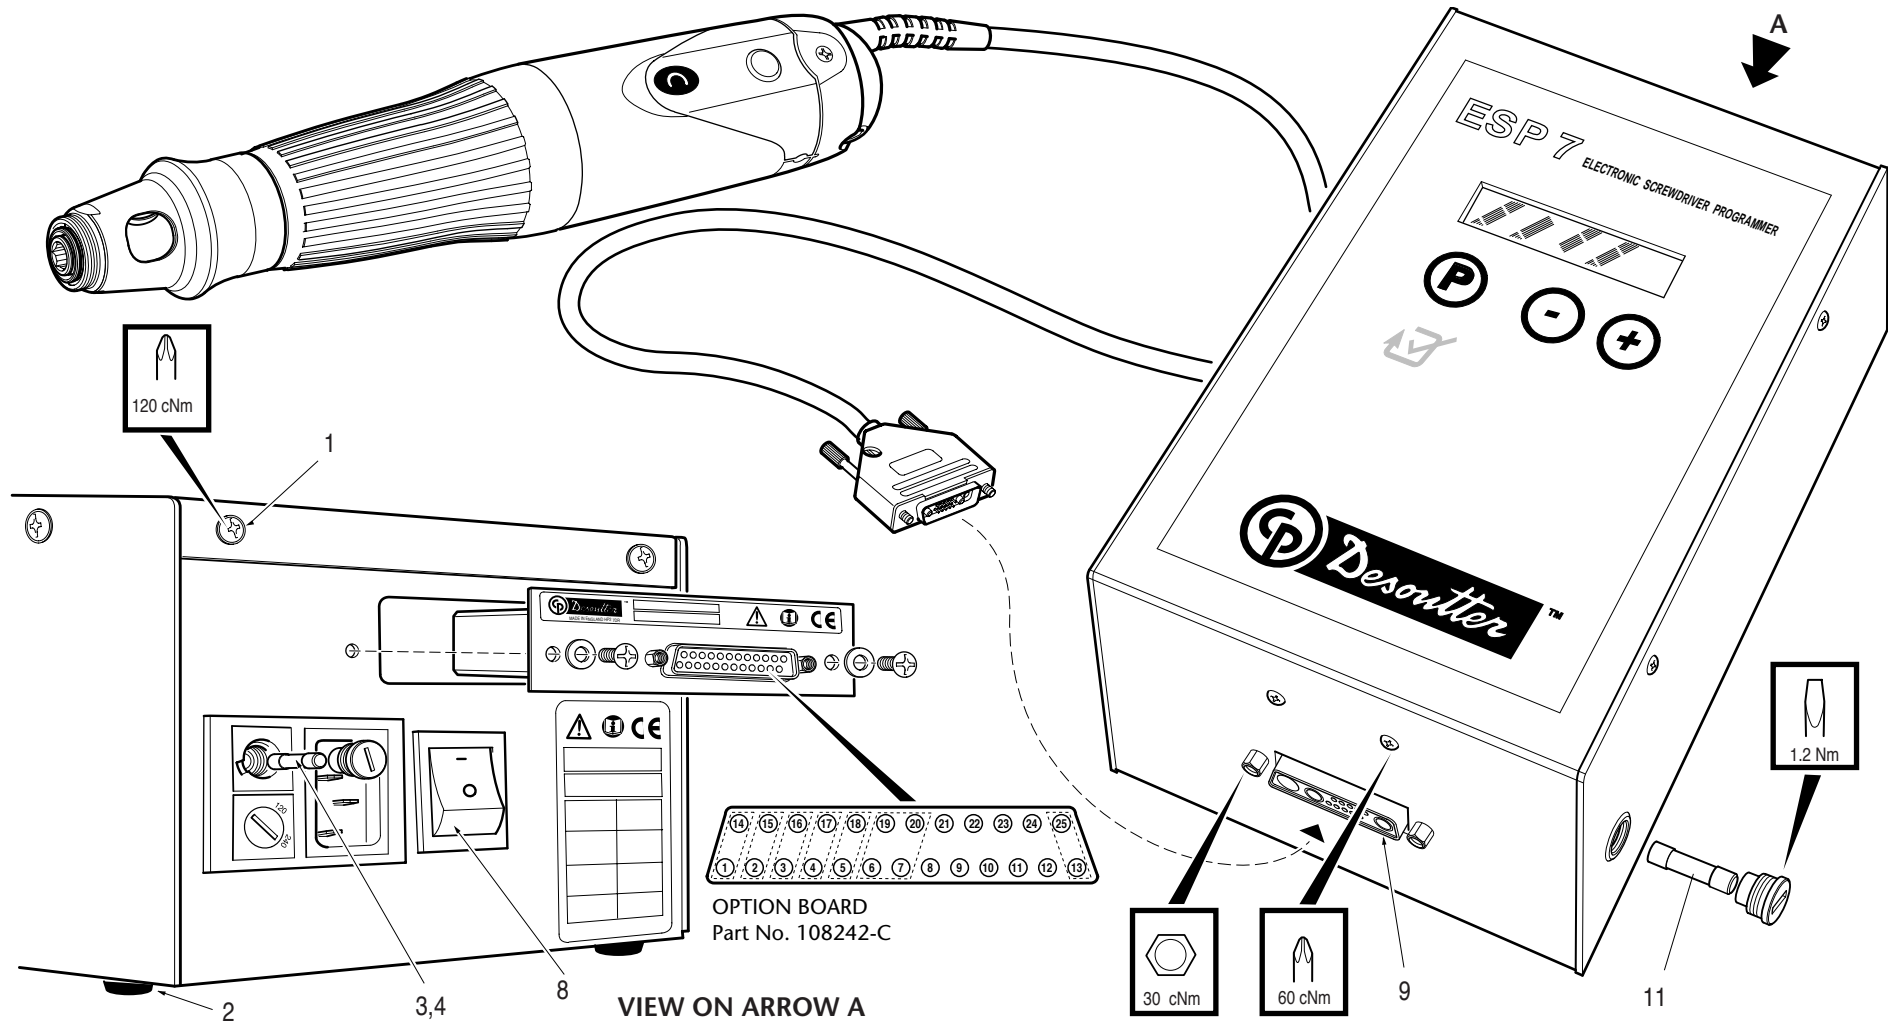

VIEW ON ARROW A

**GB** SERVICING AND OPERATING INSTRUCTIONS  
**D** WARTUNGSANLEITUNG BEDIENUNGSANLEITUNG

**F** MANUEL D'ENTRETIEN MANUEL D'UTILISATION  
**E** INSTRUCCIONES DE SERVICIO INSTRUCCIONES DE OPERACIÓN

**P** INSTRUÇÕES DE MANUTENÇÃO INSTRUÇÕES DE FUNCIONAMENTO  
**I** ISTRUZIONI PER LA MANUTENZIONE ISTRUZIONI OPERATIVE

**NL** ONDERHOUDSINSTRUCTIES BEDIENINGSinSTRUCTIES  
**GR** Οδηγίες Συντήρησης Οδηγίες Λειτουργίας

**DK** SERVICEVEJLEDNING BETJENINGSVEJLEDNING  
**N** SERVICEINSTRUKSJONER DRIFTSINSTRUKSJONER

**S** SERVICEINSTRUKTIONER BRUKSANVISNING  
**FIN** HUOLTO-OHJEET KÄYTTÖOHJEET

# ESP 7 - Option 2 Programming Description



Desoutter Limited Eaton Road Hemel Hempstead Hertfordshire HP2 7DR England

## STATEMENT OF USE:

This control board (Part No. 108242) to be used in conjunction with Desoutter unit ESP 7 (Part No. 111362). No other use permitted. For professional use only.

This instruction to be used in conjunction with the ESP 7 Option 1 instructions.

Note: When fitting or removing a new option board:

1. Anti Static precautions must be taken.
2. Ensure the ESP 7 is powered Off before connecting or disconnecting an Option Board. (Wait at least 10 seconds after switching power off).
3. The Factory Default values must be re-loaded and parameters changed as required afterwards.

## FUNCTION - PARAMETER CHANGE MODE:

Note that a tool does not have to be connected to carry out parameter changes.

### Parameter - VALUES:

To set-up specific parameter values, depressing the mode key (P) for 3 seconds enters the parameter change mode and the following is displayed:

PARAMETER MODE

If the password feature has been enabled in the "Set-Up-Routine" described in Option 1 (i.e. Password "Yes"), the following is displayed when the mode key is released:

PASSWORD 0

If a password has been enabled enter it using up key (increased +) or down key (decreased -). To validate the number depress and release the mode key (P). If the wrong password is used the unit will return to the pre-set operational mode with no parameter changes.

Note: If no password has been selected this operation will be bypassed and the first parameter will be presented to the operator.

When the mode key is next depressed and released the first parameter is presented to the user. The user can step through a list of parameters by pressing the mode key. There is always one

parameter presented at one time. This parameter can be changed by the up key (increased +) or down key (decreased -). By pressing the mode key (P) a changed value is stored temporarily and the next parameter is presented. If the mode key (P) is pressed for greater than 3 seconds, all parameter changes are saved, the parameter change mode is closed and the unit resumes normal operation. The following is displayed after the 3 second period, and disappears when the key is released.

PARAMETER STORED

The Set-up and the Parameter Mode will both be exited automatically, if there is no user input for more than 60 seconds. In this case NO changes will be stored, and the programme will operate to the original set values.

### Parameter: TOOL/MODE:

Set parameters as Basic version.

### Parameter: EXTERNAL FORWARD:

The parameter can be configured as OFF, AND or ONLY and is used in conjunction with the I/O porting.

OFF: means inactive, so only the tool start (Lever/Trigger and/or push) will be active.

AND: means that the tools start (Lever/Trigger and/or push) and the external signal must be supplied to start the operation.

ONLY: means that the fastening or reverse operation will be triggered only by the corresponding external signal.

Note: If TOOL has been programmed as PUSH, the ONLY function, although displayed, will be stored as AND. This is intentional.

### Parameter: EXTERNAL REVERSE:

The parameter can be configured as OFF, AND or ONLY and is used in conjunction with the I/O porting.

OFF: means inactive, so only the tool Reverse (button and push) will be active.

AND: means that the tools Reverse (button and push) and the external signal must be supplied to start the operation.

ONLY: means that the reverse operation will be triggered only by the corresponding external signal.

Note: If TOOL has been programmed as PUSH, the ONLY function, although displayed, will be stored as AND. This is intentional.

### Parameter: EXTERNAL STOP:

This programme can be selected as NO or YES and is used in conjunction with the I/O porting.

NO: means inactive.

YES: means an external signal is required to stop the fastening (i.e. The tool is being used to position a fastener/component to a specific position, rather than to a torque). If the clutch cut-off operation occurs before the external signal, the tightening will be rated as NOK (cycle not completed).

### Parameter: SLOW TIME, SLOW SPEED:

If the Slow Time is selected with a value greater than 0, the parameter slow speed will appear and a value can be selected. The tool will start with the programmed Slow Speed and will then switch automatically to the programmed FAST or FINAL speed after the Slow Time has elapsed. If the Slow start is set to 0, the parameter Slow Speed will be skipped. The Slow Time/Speed parameters apply only to the fastening operation.

Note: The Slow Phase does not function when using the HT-Current feature, even though the Slow Time and Slow Speeds can be programmed.

### Parameter: FAST TIME, FAST SPEED:

If the Fast Time is selected with a value greater than 0, the parameter Fast Speed will appear and a value can be selected. The tool will run at the programmed Fast Speed and will then switch automatically to the programmed FINAL speed after the Fast Time has elapsed.

Note: To ensure correct tightening of fastener, the change from Fast Speed to Final Speed must occur before the total rundown time of the fastener.

The Fast Time/Speed parameters apply only to the fastening operation.

### Parameter: FINAL TIME, FINAL SPEED:

The Final Time and Final Speed selection will apply after the slow and fast time (if programmed). The tool operates at this speed until either the shut-off operation occurs or the set time if programmed has elapsed. In non FAS mode, an "ES" message will be displayed in the right hand digits should a "Final Time" timeout occur before the operation has completed. In FAS mode, an "ERR-5" message will be displayed in the second display should a "Final Time" timeout occur before the operation is completed.

### Parameter: SPEED REVERSE:

This is the speed used for reverse operation.

# ESP 7 - Option 2 Programming Description



Desoutter Limited Eaton Road Hemel Hempstead Hertfordshire HP2 7DR England

## Summary of display contents in parameter mode: (Number in left column is Program Group number)

|                        |              |                               |
|------------------------|--------------|-------------------------------|
| <b>TOOL</b>            | <b>PUSH</b>  | <b>MANU/PUSH</b>              |
| <b>MODE</b>            | <b>PUSH</b>  | <b>PUSH/COMBI</b>             |
| <b>EXT. FORWARD</b>    | <b>OFF</b>   | <b>OFF/AND/ONLY</b>           |
| <b>EXT. REVERSE</b>    | <b>OFF</b>   | <b>OFF/AND/ONLY</b>           |
| <b>EXT. STOP</b>       | <b>OFF</b>   | <b>OFF/ON</b>                 |
| <b>1 : SLOW TIME</b>   | <b>0 . 7</b> | <b>OFF, 0.1 . . . 9.9 sec</b> |
| <b>1 : SLOW SPEED</b>  | <b>4 0 %</b> | <b>30% . . . 100%</b>         |
| <b>1 : FAST TIME</b>   | <b>0 . 7</b> | <b>OFF, 0.1 . . . 9.9 sec</b> |
| <b>1 : FAST SPEED</b>  | <b>8 0 %</b> | <b>30% . . . 100%</b>         |
| <b>1 : FINAL TIME</b>  | <b>5 . 0</b> | <b>OFF, 0.1 . . . 9.9 sec</b> |
| <b>1 : FINAL SPEED</b> | <b>3 0 %</b> | <b>30% . . . 100%</b>         |
| <b>1 : REVERSE</b>     | <b>6 0 %</b> | <b>30% . . . 100%</b>         |

### I/O Signals:

The option modules add the following digital input/output capabilities to the system.

IN: EXTERNAL FORWARD IN: EXTERNAL REVERSE

IN: EXTERNAL STOP.

OUT: CYCLE COMPLETE (OK), same operation as LED on front panel.

OUT: NOT COMPLETED (NOK).

### Functionality of Inputs:

EXTERNAL FORWARD and EXTERNAL REVERSE are for external operation of the tool.

EXTERNAL STOP NO/YES. When "External Stop" is programmed YES, this input will cause the tool to stop.

### Functionality of Outputs:

The outputs are switched inactive with every trigger operation, which sets the tool into Forward motion.

The OK (Cycle Complete) or NOK (Not Completed) will be rated by the following:

A tightening finished by a valid clutch operation will be rated as OK.

## Signals on the I/O connector:

| Signal               | I/O    | Pin/common connections | Description   | Signal Type | Signal Duration   |
|----------------------|--------|------------------------|---|-------------|---|
| EXTERNAL FORWARD     | Input  | 21                     | Signal to run tool forward, can be used exclusive or together with the tool button.         | L           | 24V signal<br>Must be enabled when Ext Forward = And or Only  |
| EXTERNAL REVERSE     | Input  | 22                     | Signal to run tool in reverse, can be used exclusive or together with the tool button.      | L           | 24V signal<br>Must be enabled when Ext Reverse = And or Only  |
| EXTERNAL STOP        | Input  | 12                     | Allows immediate stop of tool (depth sensor, park position)                                 | P           | 24V signal. See Note below.   |
| CYCLE COMPLETED (OK) | Output | 2/15                   | Signals that the fastening is complete - i.e. clutch has fired or current shutoff has fired | L           | 24V signal<br>Signal remains enabled until start of next tightening cycle (not reverse) or ESP is powered off |
| NOT COMPLETED (NOK)  | Output | 1/14                   | Signals that the tool has stopped, but fastening was not successful.                        | L           | 24V signal<br>Signal remains enabled until start of next tightening cycle (not reverse) or ESP is powered off |
| +24V                 |        | 5/18                   | 24V from external power supply  | L           | Required for all External I/O operations  |
| 0V                   |        | 6/7/13/19<br>20/25     | 0V return to external power supply  | L           | Required for all External I/O operations  |

**WARNING:** A valid clutch operation requires that the tool is held firmly against the fastener throughout the operation and for the tightening to be completed within the Final Time period. (If programmed). For further information, refer to "Explanation of status of Green OK "LED" in ESP 7 Programming Description - Option 1.

All other results will show a NOK display.

Note: An external 24V power supply is required to enable the External Input and Output signals.

Maximum output current per output is 500mA.

Current per input is 9mA.

L Signal level required for time period indicated.

P Can be a Pulse with a minimum time duration of 200ms, however if longer the External Stop must be disabled before the start of the next cycle. Note that signals Reset Last, Reset All and NOK Receipt are rising edge triggered. While they can be low or high at the start of the next cycle, to be used at the end of it, they must be first disabled and then enabled.

© Copyright 2001, Desoutter, HP2 7DR, UK.

All rights reserved. Any unauthorized use or copying of the contents or part thereof is prohibited. This applies in particular to trademarks, model denominations, part numbers and drawings.


Use only authorized parts. Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability.

# ESP 7 - Option 2 Programming Description



Desoutter Limited Eaton Road Hemel Hempstead Hertfordshire HP2 7DR England

## Pins of Ext I/O Pin D 25 Pin D type connector as viewed from rear of ESP 7 Controller

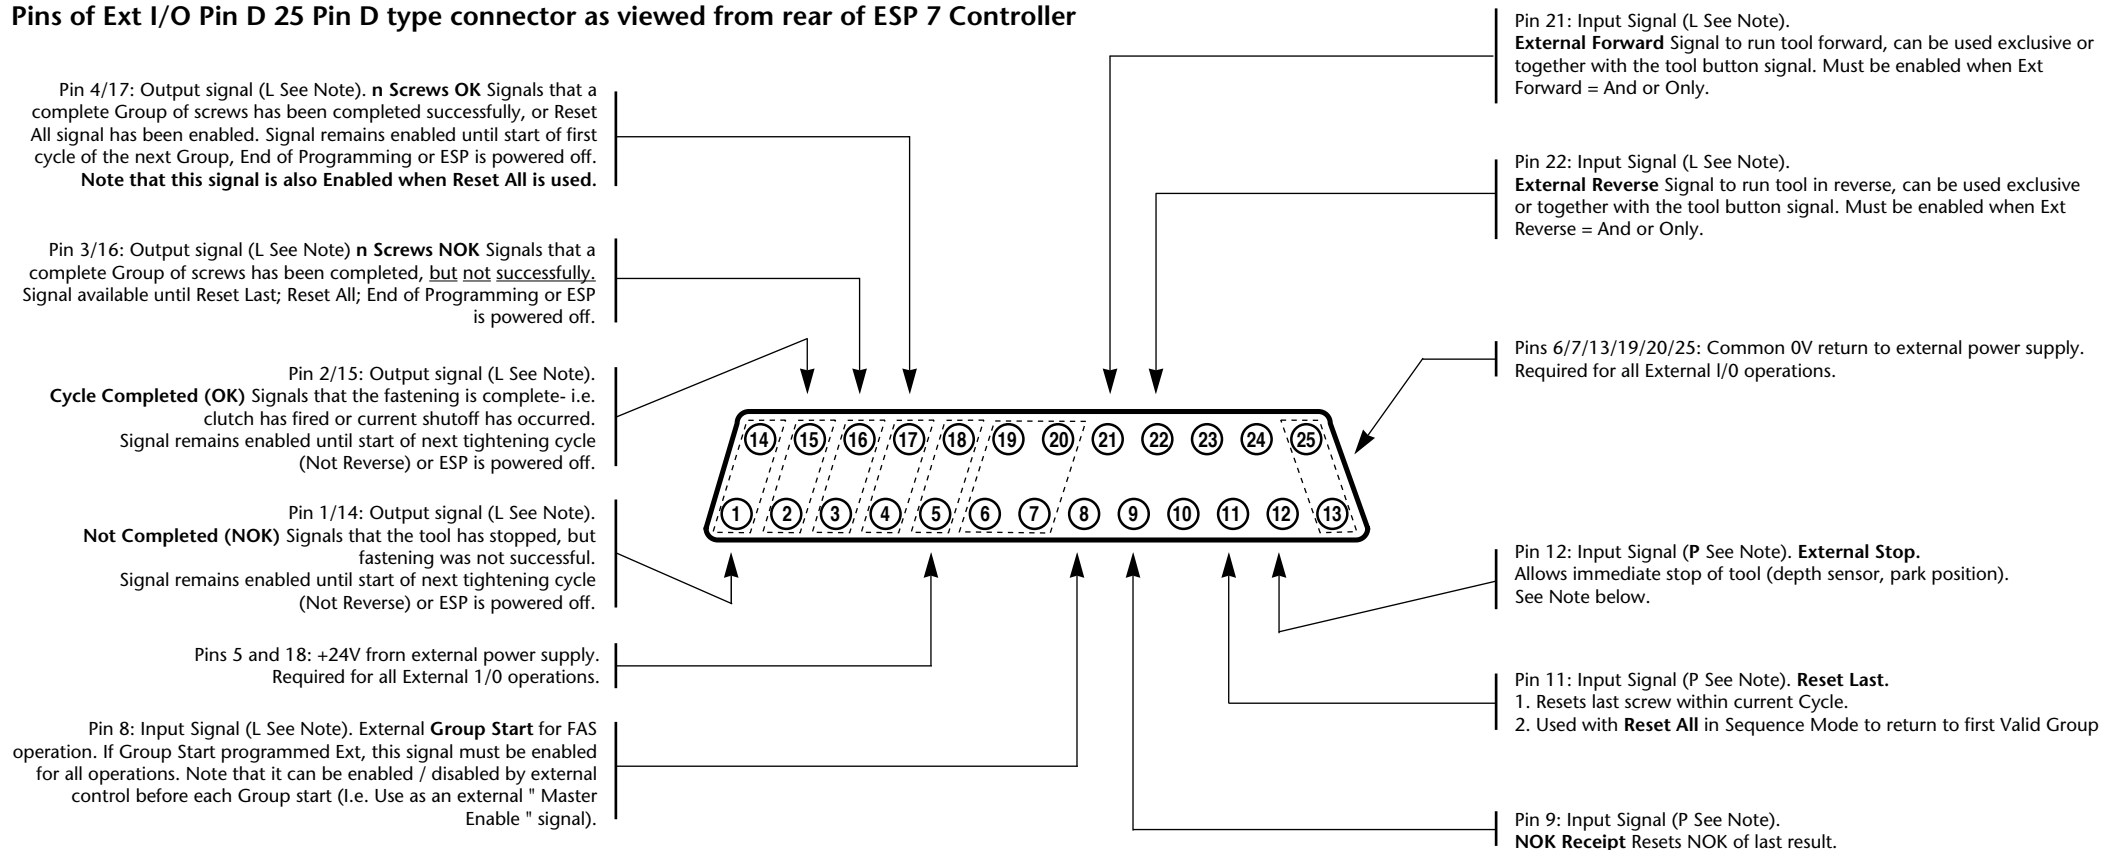

NOTE, An external 24V power supply is required to enable the External Input and Output signals. Maximum output current per output is 500mA. Current per Input is 9mA.  
 L: +24V Signal level required for time period indicated.  
 P: +24V Can be a Pulse with a minimum time duration of 200ms, however if longer, External Stop must be disabled before the start of the next cycle.  
 Note that signals **Reset Last**, **Reset All** and **NOK Receipt** are rising edge triggered. While they can be low or high at the start of the next cycle, to be used at the end of it, they must be first disabled and then enabled.